

Alead

BTRX2

**Bluetooth Wireless
Voice/Audio Receiver**

P/N ASRX5C2XXX

USER GUIDE



Declaration of Conformity. We declare that product ASRX5C2XXX conforms to the R&TTE Directive 1999/5/RC.

FCC ID:TNZSRX3C2XXX


CE 0678

INTRODUCTION

This Bluetooth voice/audio receiver (Rx) offers the latest innovation in Bluetooth technology. Users can listen the audio, music, voice remotely and take calls with built-in microphone wirelessly.

GETTING STARTED

Unpack the package carefully and confirm that you have all of parts as shown below.

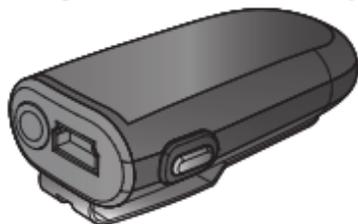

Receiver



USB charging cable



3.5mm TRRS audio cable




QSG

Please check the contents carefully and contact your local dealer immediately if anything is missing or damaged.

PRODUCT OVERVIEW


See image below. Please note some models of Rx will differ slightly in style, color and the functionality may vary according to their specifications.

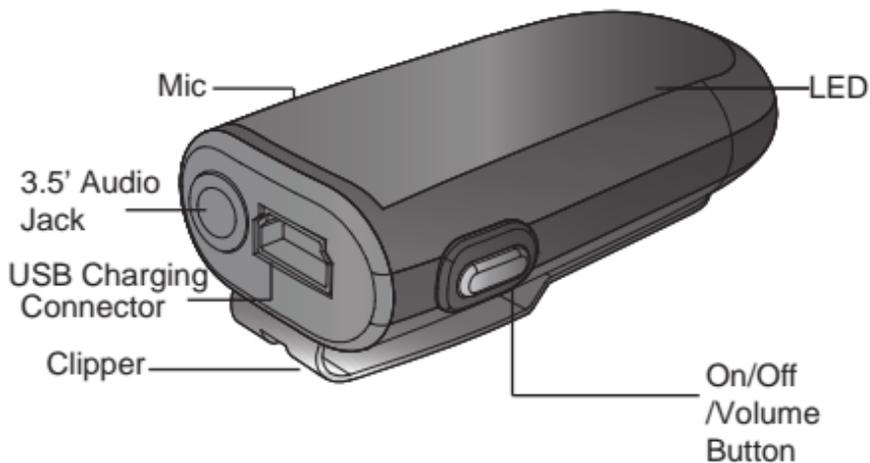

CHARGING

Before using the Rx, you must charge it for approximately 2 hours. After fully charged, the battery provides up to 6 hours of operation time and up to 120 hours of standby time .

Plug the USB charging cable into mini USB connector. Plug the other side of the USB charging cable into a powered USB connector.

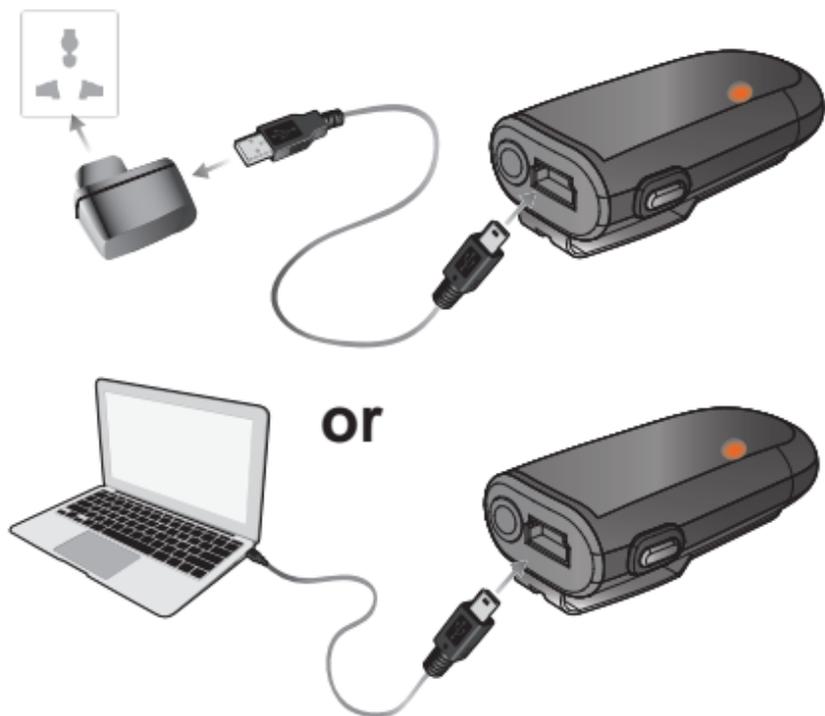


When charging, the **amber LED** will be lighted. When charging is completed, the **amber LED** will be turn off or dim.


PAIRING

● To pair and connect with iPods, iPhones, iPads, tablets, android phones, audio transmitter, Bluetooth enabled MP3, microphone, TV, PC, Mac...etc


1. Press and hold the ON/OFF button for about 3 seconds until blue LED blinking fast.

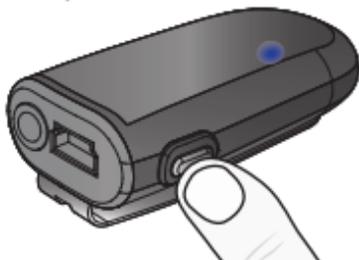

2. After the Rx is in pairing state, initiate other Bluetooth device for pairing or Bluetooth search feature and find the device name "BTRX2". Refer to your iPhones', PCs' User Guide. If pin code requested during pairing, please submit the pin code 0000.

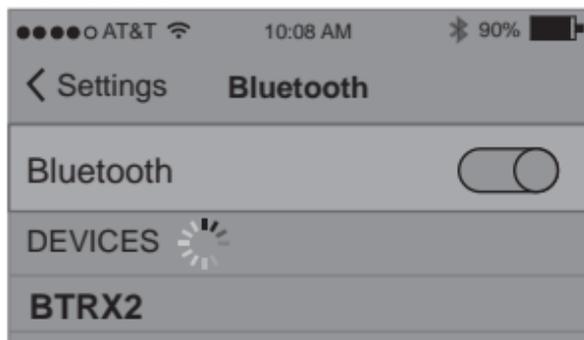

3. The other Bluetooth device should find the Rx and pair with it. After both paired and connected, the LED changes to flash slowly with blue color.

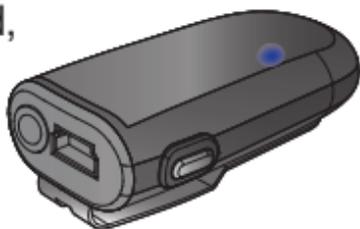

TURN ON

Press and hold the ON/OFF button for about 2 seconds, until the blue LED flashes. Release the ON/OFF button. The Rx is now turned on and will connect to the last used device automatically.



TURN OFF

Press and hold the ON/OFF button for about 3 seconds, the amber LED will stay on for about 1 second and then the Rx will be turn off. Release the ON/OFF button.




USING RECEIVER

After connected, the Rx will receive the audio, voice or music from the paired Bluetooth device wirelessly.


● **To receive and listen audio, voice and music,**

Fit 3.5mm plug audio cable to Rx,

Plug your 3.5mm audio plug of audio cable into the Rx's audio jack and another side connects to "Audio In" of your audio speaker, home stereo, car stereo, PA systems, voice recorder or headphone. Then, you can listen and enjoy audio, voice and music wirelessly.

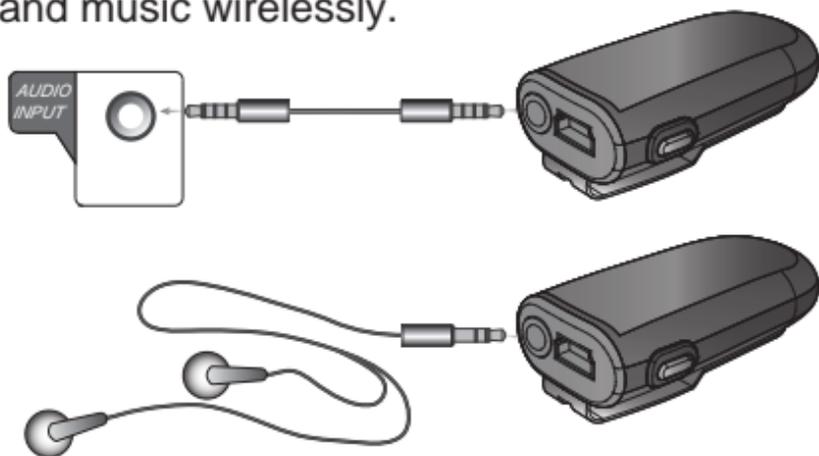

※ Note: Rx TRRS audio jack provides extra audio channel output for voice recording for TRRS audio input device such as iPhones and other mobile devices...etc

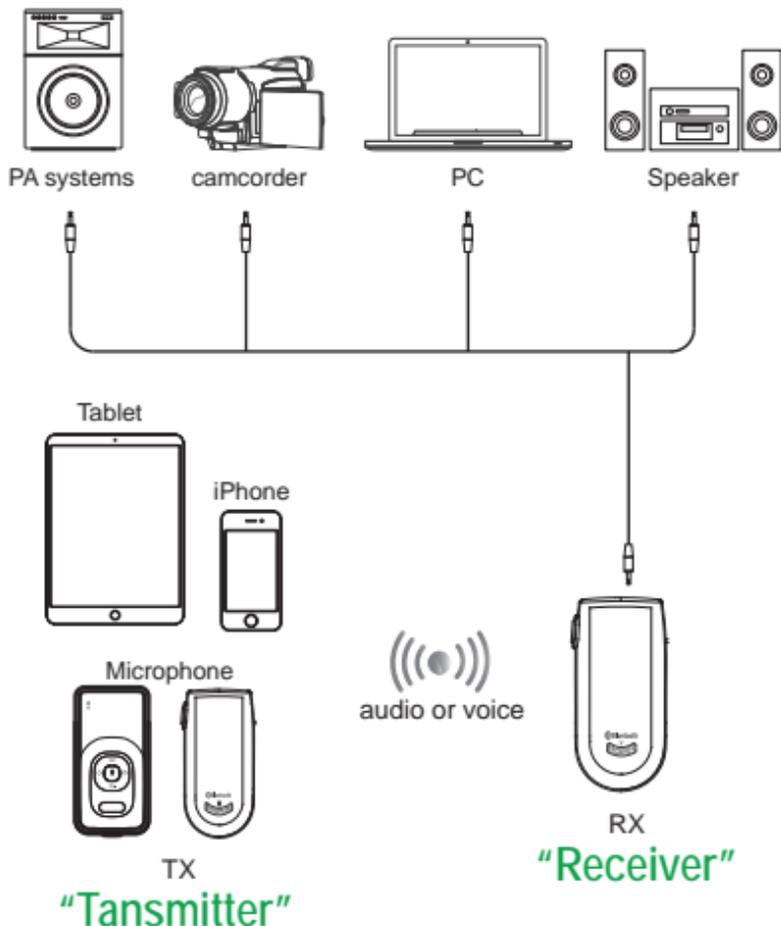

● **Adjusting the Rx Audio Volume**

To increase the audio volume

While listening audio/voice, click the ON/OFF button once to increase the volume by one step. Repeat this procedure until you reach the desired level.

To decrease the audio volume

While listening audio/voice, quick click the ON/OFF button two times continuously to decrease the volume by one step. Repeat this procedure until you reach the desired level.

● **To take calls**

Press the ON/OFF button to take or answer call via built-in microphone.

※ Note: Rx supports latest A2DP, headset/handfree profiles for voice, stereo audio streaming.

VISUAL INDICATION

The LED can also indicate the status of Rx working statuses.

Statues	Indication
Charging	amber LED is On
Not Connected	blue LED Low speed flash, approx. every 5 seconds
Connected and receiving audio	blue LED middle speed flash
Rx in pairing mode	blue LED quick flashing
Power On	blue LED flash
Power Off	amber LED stay on 1 second

TROUBLESHOOTING

Please note that you should also be familiar with the operation of your audio transmitter, smart phone or other connecting Bluetooth device. Please read the User Guide for your device carefully. For operation with a PC or laptop, please note that these

devices should also be Bluetooth enabled with Bluetooth driver in order to enable correct operation.

Problem	Likely Cause / Solution
Rx does not reconnect. Lost Connection. blue LED flashes at 5 second intervals.	Rx and paired device or smart phone was out of range for more than 30 seconds. Switch both off and switch on again to reconnect.
Rx will not pair with audio player or smart phone	Ensure the PIN code is 0000.

CUSTOMER SERVICE INFORMATION

For other Alead Bluetooth products or supporting, please view our website www.aleadinc.com or email info@aleadinc.com or contact your local representative.

DISCLAIMER

Whilst every effort has been made to ensure that the information in this manual is accurate and complete, no liability will be accepted for any errors and/or omissions made. The manufacturer reserves the right to make changes and improvements to the specifications and features of the hardware and firmware of the products described in this document without prior notice. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form is prohibited without prior permission of the manufacturer. All trademarks acknowledged.

ENVIRONMENT

Do not throw this electrical device away with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this you will help to preserve the environment.

